


Turn Radius & Rate of Turn

Turn Radius - When the bank angle is the same, a turn flown at a higher airspeed will have a larger radius than a turn flown at a lower airspeed.

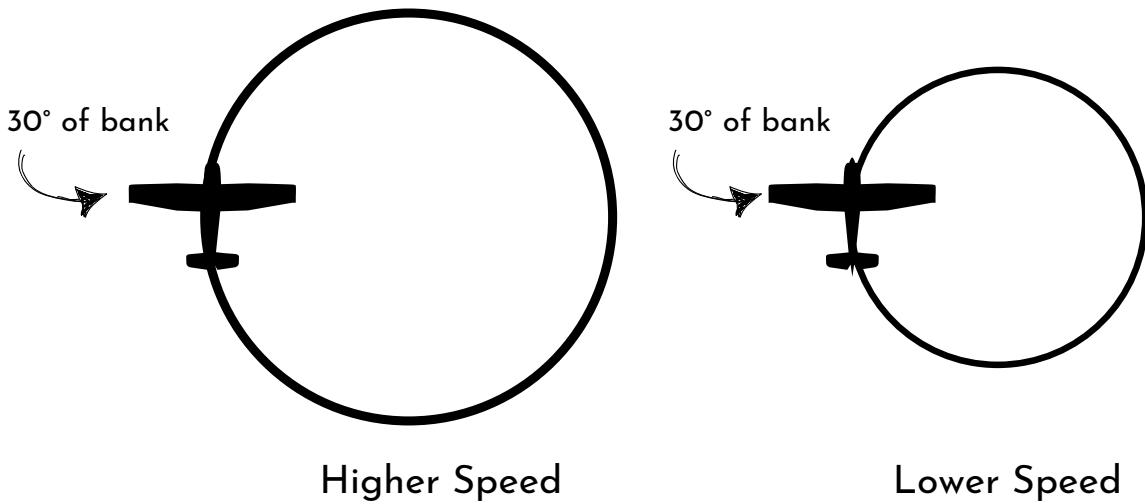

Rate of Turn - A turn flown at a higher airspeed will have a slower rate of turn than a turn flown at a slower airspeed. Therefore, to complete a standard rate turn of 360° in 2 minutes (3° per second), the higher the airspeed, the steeper the required bank angle.

